

Thank you for purchasing a SBH Radiator.

 
This leaflet will help you to install your radiator correctly and safely.

Please note that your radiator is produced from 100% stainless steel and all joints are welded. This product is suitable for use on closed or indirect systems that comply with BS5449, section 1, forced circulation hot water systems.

Installation & Mounting Procedure

To establish the most suitable position you must bear in mind the following guidelines: -

1. The radiator must be at least 35mm above the floor / skirting board and should be at least 50mm below any cupboard, window ledge / over hanging ledge.
2. Efficiency of the radiator depends on convection of warm air so it is important that the position you choose is reasonably open.
3. We recommend that you use a qualified plumber or electrician (where applicable) to install you new radiator.
4. Your radiator **MUST** be mounted with the radiator valves at the bottom and the bleed valve at the top to enable trapped air to be bled from the system (The bleed valve is situated at the rear top left hand side). This can be opened and closed using a 10mm spanner – to vent air from the towel rail loosen the nut ($\frac{1}{4}$ - $\frac{1}{2}$ turn only - once the air has vented and water is running out re-tighten but **DO NOT** over tighten).
5. Assemble the wall mounts to the radiator as per the drawing overleaf using 4 of the 8 mounting nuts, welded on the rear of the radiator. (We recommend using the outer mounting nuts for the vertical version and the inner mounting nuts for the horizontal version)
6. Place a spirit level against one of the vertical/horizontal tubes. When the spirit level indicates that it is level, mark the outer holes of the two top mounting brackets.
7. Again, using the spirit level, check that the marked holes are horizontal.



Using a 6mm masonry drill, drill the first two holes. Insert the fixing plug and attach the radiator to the wall using the screws provided.

8. Using the spirit level, check that the unit is vertical and mark the remaining mounting bracket holes. Remove the radiator from the wall, check holes are level, drill and fix.

9. THE CONNECTIONS TO YOUR HEATING SYSTEM SHOULD BE CARRIED OUT BY A QUALIFIED PLUMBER. IF YOUR RADIATOR IS ELECTRIC OR DUAL FUEL, THE ELECTRICAL CONNECTION SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

Maintenance

Your new radiator has been manufactured from 100% stainless steel making it extremely durable and hard wearing. Scratches and marks can be polished out using a mild chrome polish.

For further advice please contact:

SBH RADIATORS LTD.

Tel.01400 250195

Guarantees

Your SBH towel rail carries a life time guarantee from the date of purchase against manufacturing defects only. Damage or wear to painted finishes is not included in the guarantee. You must retain your purchase invoice as proof of purchase / guarantee.

Electrical element / components and radiator valves are guaranteed for a period of twelve months from the date of purchase against manufacturing defects only. You must retain your purchase invoice as proof of purchase / guarantee.